

General description:

The control box is the handset for manual input of price changes.

Connect the data plug from the control box to the pricepole data socket. The display then lights up and after a few seconds the price change can begin.

 
The control box automatically switches to standby-mode and the display switches off after 1 minute. Pressing the *Enter* key turns the control box ON again. If possible leave the control box connected to the data socket.

Power for the control box is normally supplied through the data plug.

If a wireless (DECT modems) setup is installed, be sure that the power plugs are connected to mains. Constant green pilotlamp = correct signal from the pricepole; flashing = faulty signal; no light = no mains power.

User panel:

- +/- :** *The value of each digit up/down can be changed by the +/- keys*
- Enter:** *Function 1: Store selections in the control box*
Function 2: Activate new prices
- Esc.:** *Function 1: Abort enter mode*
Function 2: Select status menu
- Price:** *Function 1: Begin edit mode*
Function 2: Select digit during enter mode
- Type:** *Select product*
- Keyboard 1 – 0 :** *Used for inserting prices*

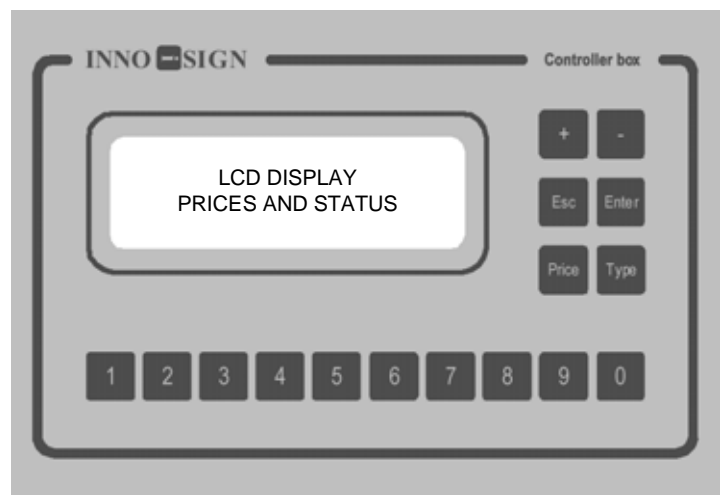

Setting prices:

1. Press *Price* to start enter mode.
2. Press *Type* to select next product (A - E).
3. Enter each price by using the *Keyboard 1-0*, or adjust each digit up and down by pressing the *+/- keys*.
If *+/- keys* are used, press *Price* to select next digit.
One or more *Digits* can be blanked by selecting * with the *+/- keys* starting with the left digit.
4. Press *Enter* if prices are correct. If changes are to be made, press *Price* and repeat previous procedure.
5. Press *Enter* a second time to transfer the *New Prices* to the pricepole.